


Lift and remove spring

If you are using a lighter spring you will need to use a string and tie these together during install

Remove C clip slide pivot pin out remove trigger

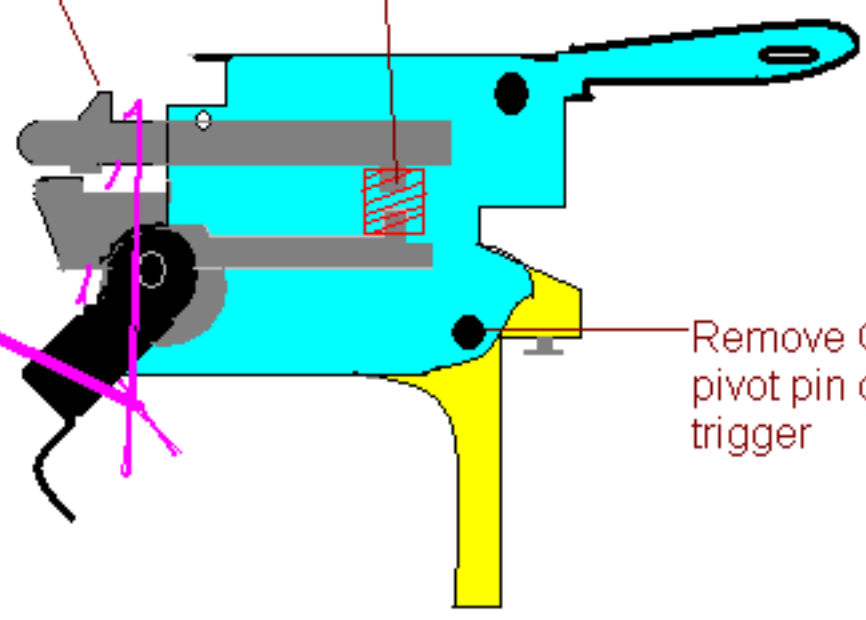


To Replace Spring

#3

lift and lean forward then close



#1 drop spring at an angle then push it back

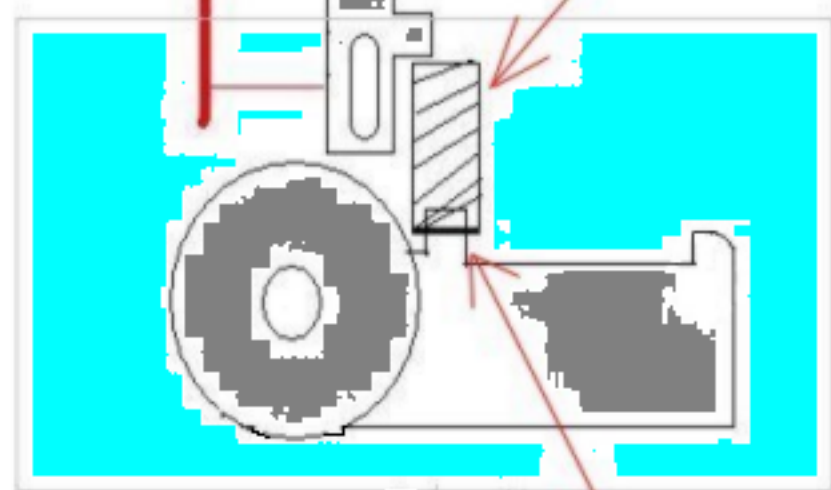

#2 make sure the spring goes over the nub